

# Wireless Laser Scanner

## Packing List

Thank you for purchasing the Wireless Laser Scanner. This package contains the items listed below. If anything is missing or damaged, please call us toll-free at 1-800-347-6439.

**This packing list is used for the following product(s):**

- Wireless Laser Scanner (V1142A)
- 36-Month Extended Warranty (V1142W)

**Your package contains the following:**

- Wireless Laser Scanner
- Wrist Strap
- USB Charging Cable
- USB Docking Station
- USB Receiver
- Installation Guide
- Hardware Warranty

# Wireless Laser Scanner

## Installation Guide

### Scanner Setup

#### Step 1. Charge the Scanner

Make sure your scanner is fully charged before using it for regular activities. Plug the USB charging cable into the scanner and plug the cable into your computer's USB port or another source. When the scanner is fully charged, the green LED will turn off. A full recharge from a completely drained battery takes approximately four hours.

#### Step 2. Connect the Scanner to Your Computer

Plug the USB receiver into one of your computer's USB ports. Alternatively, you can plug the receiver into the USB docking station, which can then be plugged into your computer. This may provide easier access to the receiver. If a request to configure the keyboard pops up on your computer, simply exit out of the request.

#### Step 3. Program the Scanner

Place this page on a flat surface and scan the following codes in order:



**1. Begin Configuration**



**4. Configure US Keyboard**



**2. Restore Default Settings**



**5. Enable Line Ending**



**3. Enable Interleaved 2 of 5**



**6. End Configuration**

## Using the Scanner

### Basic Functions

- Wake Up** Press and release the scanner’s trigger to activate it. The scanner is ready to work when the orange LED comes on.
- Sleep Mode** The scanner will automatically go into a power saving mode after 10 minutes of no use.
- Scan Barcodes** After connecting the scanner to your computer or device, open an application and then place the cursor where you want to enter data. Hold the scanner about 4 inches (10 cm) from the barcode, then hold down the trigger. Make sure the red aiming beam covers the entire width of the barcode. By default, the scanner will beep and the LED will flash blue to confirm a successful scan.

### Scanner LED Indicators

Status / indicator	Beeper	Blue LED	Green LED	Red LED	Orange LED
Good Scan	1 beep	1 blink			
Transmission failure	4 beeps	4 blink			
Trasmission failure (in memory mode)	2 beeps	2 blink			
Low battery				On	
Recharge			On		
Operation mode					On
Sleeping	None	None	None	None	None

### Receiver LED Indicators

Color	Indication
Red	LED will flash to present the success of transmision

## Pairing the Scanner and Receiver

Your scanner and receiver should already be paired. But if they unpair, follow these steps:

1. Plug the USB receiver into the bottom of the scanner.
2. Hold the trigger down for a few seconds and release.
3. You will know they have been successfully paired when the scanner beeps once and the receiver blinks once.
4. Plug the receiver back into your computer.

## Volume



High (default)



Low



Off

## Vibration



Enable



Disable (default)

Should you need further assistance or have any questions about the installation process, please contact COMPanion Customer Support at 1-800-347-4942 or email [support@companioncorp.com](mailto:support@companioncorp.com).

## Hardware Warranty

COMPanion Corporation's scanners, printers, cash drawers, and other hardware devices are warranted by COMPanion against defects in materials and workmanship for the specified period from the date of shipment by COMPanion to the end-user. During this warranty period, we, or our designated repair facility, will repair or replace (at our option) at no charge any device that proves to be defective, provided you return the device, shipping prepaid, to COMPanion, following the return guidelines below.

**Standard Warranty Period: 12 Months**

**Extended Warranty Period: 36 Months**

If the 36-Month Extended Warranty was purchased with your hardware, as designated on the packing slip, the term will be added to the 12-Month Standard Warranty, for a total of 48 months of coverage.

This warranty does not apply to damage caused by accident or misuse, including by the use of paper not sourced from COMPanion, or as the result of service or modification by anyone other than COMPanion or our designated repair facility.

No other express warranty is given. The replacement of the device is your exclusive remedy. Any other implied warranty of merchantability or fitness is limited to the duration of this written warranty. Some states, provinces, and countries do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

In no event shall COMPanion or its designated repair facility be liable for consequential damages. Some states, provinces, and countries do not allow for the exclusion or limitation of incidental or consequential damages, and so the above limitations or exclusions may not apply to you.

### Return Guidelines

Should your device fail to operate during the period of this warranty, contact COMPanion Customer Support at 1-800-347-4942. Our staff will help resolve the issue or provide instructions to properly return the device to COMPanion.

[This page has been intentionally left blank.]